



KONICA MINOLTA




NEW

2D Color Analyzer

CA-2500

Ideal for display mura (nonuniformity) evaluation and inspection on smartphones and tablet PCs.

Accurately and easily measures the distribution of luminance and chromaticity.

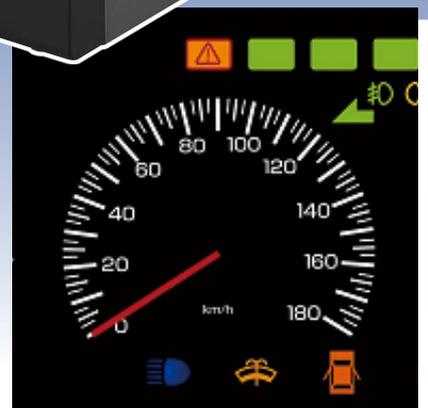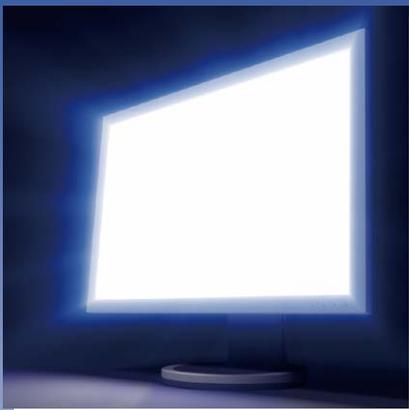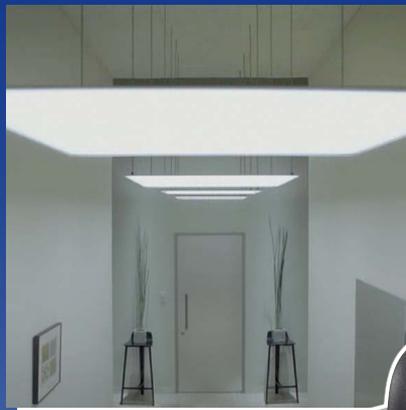

Giving Shape to Ideas


The included software provides advanced functionality with simple operation to make the entire measurement process easier, from measurement preparations such as focusing and positioning through measurements of luminance and chromaticity distribution to evaluation of measurement results.

Own a CA-2000?

The new CA-S25w software can also be used with existing CA-2000 instruments. It provides vast improvements over the previous CA-S20w software, while also being able to read data measured and saved using CA-S20w. Visit our website to download the latest CA-S25w free of charge.

GUI assists with normal workflow

Measurement preparations

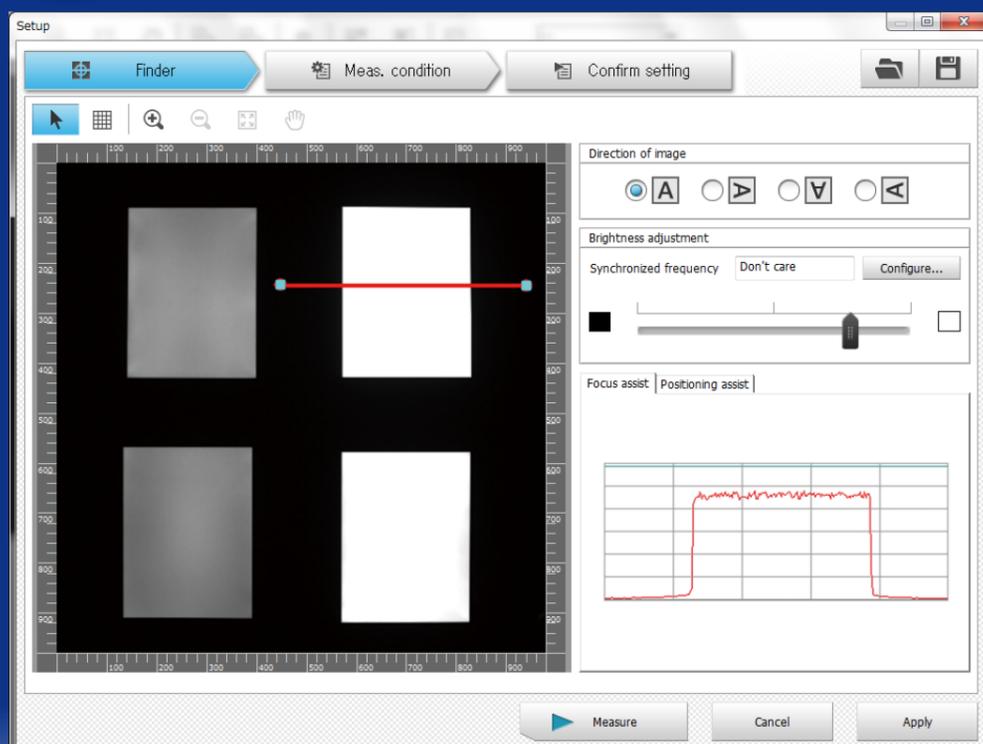

Easy-to-understand screens with easy-to-use tools


During/after measurement

Automatic measurement area extraction function


The light-emitting areas of measurement subjects can be automatically extracted and set as evaluation regions. This eliminates the need for manually defining and positioning evaluation regions, reducing the setup time required.

Multi-subject measurement capability

Evaluation of the mura (unevenness) of multiple subjects can now be performed simultaneously. With the previous CA-S20w, the same tone gradation scale was used for all subjects; if subject luminances were very different, adjusting the scale to properly view one subject caused saturation of tones in evaluation areas for other subjects. But with CA-S25w, each evaluation area has its own tone gradation scale which can be individually adjusted according to the subject luminance. This allows the mura of multiple subjects with widely different luminances to be viewed simultaneously on the same screen.

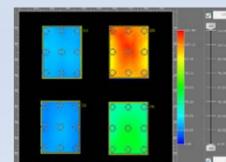

With single-scale setting of previous software

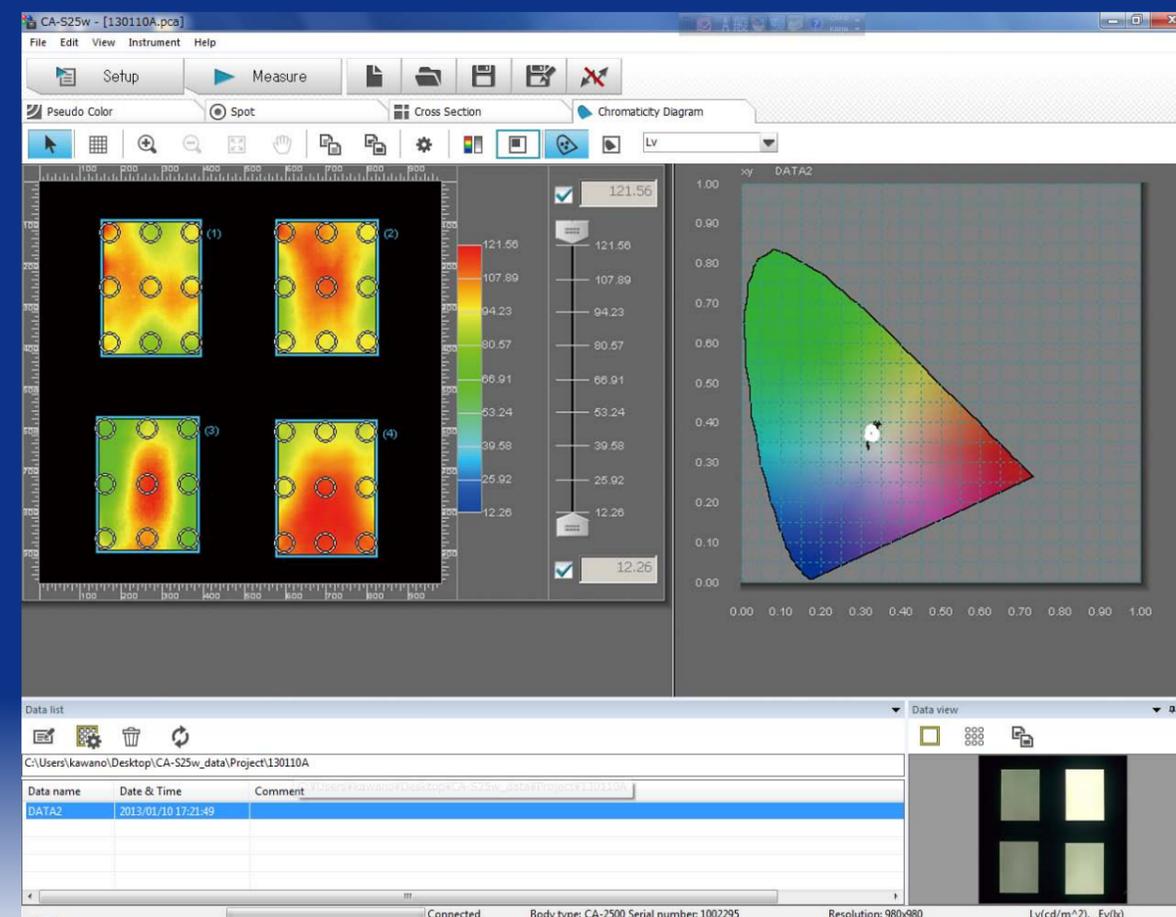

Focus assist function

Focus adjustment can be performed easily by viewing the cross-sectional slope of the luminance at the border between bright and dark areas.




When subject is not in focus

When subject is in focus

Positioning assist function

The positioning and orientation (tilt and twist) of the CA-2500 relative to the measurement subject can be easily checked while making fine adjustments, reducing the work and time required to achieve proper positioning and orientation.

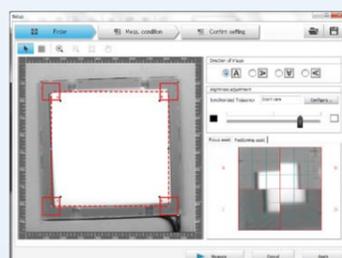

Various mura (unevenness) display functions

Pseudocolor display

Luminance and chromaticity distribution can be easily observed.

Spot measurement

The size and number of spots to be evaluated (indicated by black circles in the screen example above) can be freely defined by the user to enable multi-point measurement using the average values of each spot. Up to a maximum of 2500 spots can be defined.

Chromaticity diagram display

Variations in chromaticity can be displayed on the chromaticity diagram display.

Other convenient functions

Data transfer to Excel®, etc.


The desired range of data or spot values can be selected and transferred to Excel®, Word®, etc. via the clipboard. The various graphs and displays can also be copied and pasted, making it easy to create reports.

Multiple exposure function

By combining measurement data obtained using exposure times optimized for different luminance levels, subjects requiring a wide dynamic range (such as a gray scale) can be easily measured.

XYZ filters provide high correlation with the spectral response of the human eye.

Instead of the RGB color-separation filters used by digital video cameras, etc., the CA-2500 uses XYZ filters that closely match the CIE 1931 color-matching functions to provide luminance and chromaticity measurements that have high correlation with the spectral response of the human eye.

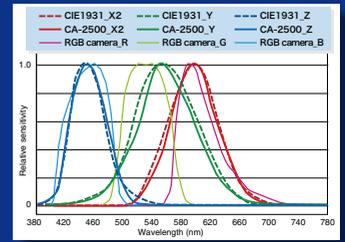

Interchangeable lenses for measurements of various subjects

Standard, wide-angle, and telephoto lenses (plus two macro rings for the telephoto lens) are available, enabling the optimum lens to be selected according to the particular subject, measurement area, or measurement method.

Comprehensive factory calibration

Each lens is individually factory-calibrated at multiple focal points to correct for sensitivity variations due to the combination of sensor, optical filters, and the lens itself. By using the included calibration data, high-accuracy measurements of luminance and chromaticity distribution can be taken immediately after receiving the product without being restricted to a particular measurement method, subject size or subject brightness.

Even flickering light sources such as PDP or OLED televisions can be measured with good accuracy.

The synchronization frequency (4 to 2,000 Hz) of display devices and pulsed light sources can be input to enable synchronized measurements.

NEW Includes advanced Data Management Software CA-S25w as standard accessory

Advanced functions such as focus assist function, positioning assist function, and automatic measurement area extraction function greatly simplify troublesome measurement preparations.

NEW Includes SDK (software development kit)

The SDK can be used by customers to efficiently create their own software for controlling the CA-2500.

Compact and lightweight so it can be easily set up where needed.

NEW Expanded low-luminance measurement range

The minimum measurable luminance has been improved from 0.1cd/m² to 0.05cd/m².




NEW Improved durability

Service life measurement cycles have been increased to approximately 5 times that of the CA-2000.

Dimensions (Unit: mm)

*When standard lens and lens hood are attached

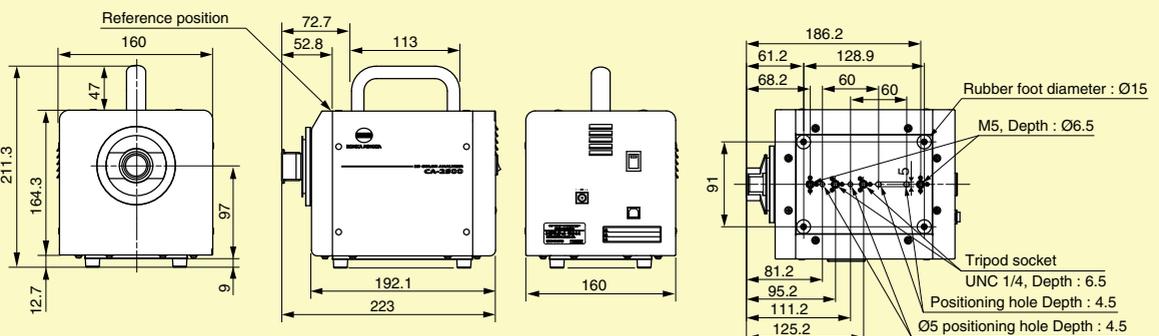


Applications

- Simultaneous luminance/chromaticity distribution measurement of multiple small- or medium-sized LCD or organic EL panels
- Luminance/chromaticity measurement of single large-sized LCD or organic EL panels
- Luminance distribution measurements in illumination field
- Measurements of luminance/correlated color temperature distribution of various light-emitting subjects
- Luminance distribution measurements of automobile instrument panel meters



System Configuration

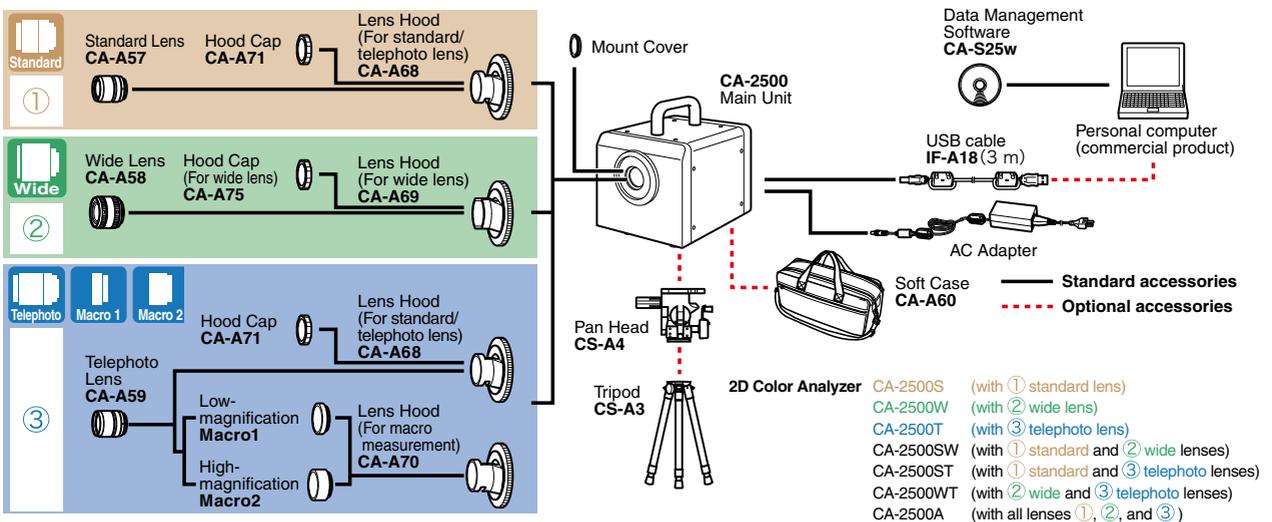

Components other than those shown in the areas shaded are common for all packages.

* Each lens comes with a lens cap, mount cap, and calibration data DVD.

Measurable object size with typical measurement distances (Width/height of measurement square)

Distance (mm)	Standard lens			Wide lens			Telephoto lens			Low magnification macro ring			High magnification macro ring		
	Measurement size (mm)	Measurable display size (inches)		Measurement size (mm)	Measurable display size (inches)		Measurement size (mm)	Measurable display size (inches)		Measurement size (mm)	Measurable display size (inches)		Measurement size (mm)	Measurable display size (inches)	
250	98	16 : 9	4 : 3	190	16 : 9	4 : 3									
300	121	4.4	4.8	235	8.6	9.3									
500	212	5.5	6	416	11	12									
1000	439	9.6	10.4	869	19	20	130	5.9	6.4	57	2.5	2.8			
2000	892	20	22	1776	39	43	275	12	14						
3000	1345	40	44	2682	80	87	420	19	21						
5000	2252	61	66	4495	121	132	711	32	35						
		102	111		203	221									

Data Management Software CA-S25w

Controllable instruments : CA-2000; CA-2500

Display language : English; Japanese
(Selectable at time of installation)

System Requirements

OS Windows® XP Professional 32-bit SP3, 64-bit SP2
Windows® 7 Professional 32-bit, 64-bit
(English, Japanese and Chinese (Simplified versions))

• The hardware of the computer system to be used must meet or exceed the greater of the recommended system requirements for the compatible OS being used or the following specifications.

CPU Pentium® 4 2.8 GHz equivalent or higher

Memory 1024 MB or more

Hard Disk

Needs free space of 80 MB at least on system drive (where OS is installed)
In addition, each lens needs the following free spaces for installing calibration data.

For standard lens: approx. 540 MB

For wide lens: approx. 470 MB

For telephoto lens: approx. 1.3 GB

To save measurement data on hard disk, additional free space is required (approx. 110 MB for 10 measurement data)

Approx. 1 MB required for setting files containing spot settings, measurement condition settings, etc.

Display

Display capable of at least 1280 x 768 dots / 65536 colors (High color, 16-bit)

Others

Optical drive capable of reading CD-ROM (for installing software) and DVD-ROM (for installing calibration data) necessary.
USB port: For connecting measuring instrument

Main Specifications CA-2500

Model	CA-2500S	CA-2500W	CA-2500T		
Light receptor	CCD image sensor (monochrome); 2/3-inch; Effective number of pixels: 1,000 x 1,000 pixels; Equipped with XYZ filter (closely matches CIE 1931 color-matching function) and ND filter				
Lens	Interchangeable Standard, wide, and telephoto lenses; low-magnification and high-magnification macro rings (for use with telephoto lens)				
Measurement points (Resolution)	980 x 980 (490 x 490 or 196 x 196 selectable by using Data Management Software CA-S25w)				
Color indication modes	XYZ, L _v x _y , L _v u _v [*] , TΔuv, Dominant wavelength, Excitation purity, L _v contrast				
Display modes	Pseudocolor, Chromaticity diagram, Spot, Cross section, Color difference				
Measurement sizes (length per side of square) (*1)	Standard lens	Wide lens	Telephoto lens		
	Approx. 98 mm or more (depending on the distance)	Approx. 145 mm or more (depending on the distance)	Approx. 115 mm or more (depending on the distance)	With low-magnification macro ring	With high-magnification macro ring
Measurable size for typical measurement distances (size/distance)	98 mm / 250 mm	Approx. 145 mm / 200 mm	Approx. 115 mm / 900 mm	Approx. 57mm (Fixed)	Approx. 27mm (Fixed)
	210 mm / 500 mm	Approx. 410 mm / 500 mm	Approx. 275 mm / 2,000 mm		
	440 mm / 1,000 mm	Approx. 850 mm / 1,000 mm	Approx. 420 mm / 3,000 mm	57 mm / 500 mm Approx. (Fixed)	27 mm / 300 mm Approx. (Fixed)
	890 mm / 2,000 mm	Approx. 1,770 mm / 2,000 mm	Approx.		
Measurement luminance range (including ND filter use)	0.05 - 100,000 cd/m ²	0.05 - 100,000 cd/m ²	0.25 - 100,000 cd/m ²	0.25 - 100,000 cd/m ²	0.5 - 100,000 cd/m ²
Measurement time (*2)	Single : Approx. 5 sec. or more; 4-time integration: Approx. 6 sec. or more; 16-time integration: Approx. 10 sec. or more; 64-time integration : Approx. 25 sec. or more; 256-time integration : Approx. 80 sec. or more				
Accuracy (*3)	Luminance	±3 %	±3 %	±3 %	±3 %
	Chromaticity	±0.005	±0.005	±0.005	±0.005
Repeatability (*4)	Luminance	0.5 %	0.5 %	0.5 %	0.5 %
	Chromaticity	0.001	0.001	0.001	0.001
Inter-point error (*5)	Luminance (*6)	±2 %	±2 %	±2 %	±2 %
	Chromaticity (*6)	±0.002	±0.002	±0.002	±0.002
	Luminance (*7)	±3 %	±3 %	±3 %	±3 %
	Chromaticity (*7)	±0.003	±0.003	±0.003	±0.003
Other functions	Measurement sync (Synchronization frequency selectable), User calibration Integration function				
Interface	USB 2.0 or higher				
Operating temperature and humidity range (*8)	10-30°C, Relative humidity 70% or less/No condensation				
Storage temperature and humidity range (*8)	0-30°C, Relative humidity 70% or less/No condensation, 30-35°C, Relative humidity 55% or less/No condensation				
Size	Body only	160 (W) x 164 (H) x 192 (D) mm (Height including handle: 211 mm)			
	When lens and lens hood are attached	224 (D) mm	219 (D) mm	224 (D) mm	230 (D) mm
Weight	3.5 kg approx. (when standard lens and lens hood are attached)				
Power source	AC adapter 100-240 V ~, 0.75 A, 50-60 Hz				

- *1: Error in angle of view: 7%
 *2: Measurement time differs depending on brightness of measurement object, PC performance, and data processing contents.
 The specifications above were obtained under Konica Minolta's measurement conditions shown below:
 PC CPU : Intel Core i7-3770 3.40GHz
 Memory : 8GB
 Data processing : Pseudocolor display of luminance data
 Resolution : 980 x 980
 Shutter speed : Y measurement : 1/64 sec., XZ measurement : 1/32 sec.
 Measurement subject brightness:
 Standard/wide lens: Approx. 80 cd/m², Telephoto lens: Approx. 300 cd/m²
 Low-magnification macro ring and telephoto lens: Approx. 400 cd/m²
 High-magnification macro ring and telephoto lens: Approx. 600 cd/m²
 * The measurement time becomes longer when the object is dark. The longest measurement time is approx. 14 seconds with 1-time integration, approx. 45 seconds with 4-time integration, approx. 3 minutes with 16-time integration, approx. 11 minutes with 64-time integration and approx. 44 minutes with 256-time integration.
 *3: The specifications above were obtained under Konica Minolta's measurement conditions shown below:
 Measurement subject brightness:
 Standard/wide lens: Approx. 35 cd/m², Telephoto lens: Approx. 140 cd/m²
 Low-magnification macro ring and telephoto lens: Approx. 250 cd/m²
 High-magnification macro ring and telephoto lens: Approx. 250 cd/m²
 Distance: Minimum distance of each lens, Evaluation: Based on the average obtained within 10% range at the center of the screen. Temperature: 23°C±2°C, Relative humidity: 40%±10%, Measuring light: White, reference light source, Integration: 64 times (Normal mode)
 *4: The specifications above were obtained under Konica Minolta's measurement conditions shown below:
 Resolution: 196 x 196, Shutter speed: Y measurement: 1/64 sec., XZ measurement: 1/32 sec. Gain: Normal (x1), Light intensity level: Midpoint of appropriate light intensity range, Evaluation: Based on the maximum repeatability (2σ) of all pixels, Temperature: 23°C±2°C, Relative humidity: 40%±10%, Measurement subject: White, reference light source, Integration: 64 times (Normal mode)
 *5: The specifications above were obtained under Konica Minolta's measurement conditions shown below:
 Measurement subject brightness:
 Standard/wide lens: Approx. 40 cd/m², Telephoto lens: Approx. 160 cd/m²
 Low-magnification macro ring and telephoto lens: Approx. 200 cd/m²
 High-magnification macro ring and telephoto lens: Approx. 350 cd/m²
 Distance: Calibration distance of each lens, Resolution: 196 x 196
 Evaluation (*6) : Based on the maximum/minimum values obtained in a square at the center of the screen measuring 60% of the height and width of the entire screen
 (*7) : Based on the maximum/minimum values obtained in the entire screen
 Temperature: 23°C±2°C, Relative humidity: 40%±10%, Measurement subject: White, reference light source, Integration: 64 times (Normal mode)
 *8: Even if the instrument is stored within the specified usage (or storage) temperature humidity range, the displayed value may change depending on long-period usage or storage conditions.

Cautions Regarding Temperature / Humidity Conditions for CA-2500

It is recommended that the instrument be used and stored under standard conditions (Temperature: 23° C; Relative humidity: 40 %), and that areas subject to high temperature and/or humidity be avoided. In addition, in order to maintain the measurement accuracy or this instrument, it is recommended that it be inspected regularly about once a year. For details on having the instrument inspected, please contact the nearest Konica Minolta authorized service facility.
 Even if the product is used within the specified operating temperature/humidity range or stored within the specified storage temperature/humidity range, the displayed values may be affected by long-term conditions of use or storage.
 If the instrument is left under the following high-temperature conditions for a long period of time, the displayed values may change as follows:
 Temperature: 30° C; Relative humidity: 70 %; Period under these conditions: 720 hours (30 days)
 Accuracy: Luminance: ±0.4%; Chromaticity: ±0.003
 Inter-point error: Luminance: ±0.2 %; Chromaticity: ±0.0003
 Temperature: 35° C; Relative humidity: 55 %; Period under these conditions: 336 hours (14 days)
 Accuracy: Luminance: ±1%; Chromaticity: ±0.006
 Inter-point error: Luminance: ±0.5 %; Chromaticity: ±0.001
 These differences in display values are due to the instrument materials and/or components being affected by the temperature and humidity conditions of long-term use or storage. In particular, optical filters are easily affected by temperature or humidity. Although measures have been taken to improve resistance to temperature/humidity changes, the accumulated effect of long-term use or storage may affect the displayed values.

- KONICA MINOLTA and the Konica Minolta logo and the symbol mark, and "Giving Shape to Ideas" are registered trademarks or trademarks of KONICA MINOLTA HOLDINGS, INC.
- Other company names and product names used herein are trademarks or registered trademarks of the respective companies
- The specifications and drawings given here are subject to change without prior notice.
- Some lamp control methods may make accurate measurements difficult.
For details, please contact your nearest Konica Minolta sales office or dealer.
- If you have any questions about specifications, please contact your Konica Minolta representative.



SAFETY PRECAUTIONS

For correct use and for your safety, be sure to read the instruction manual before using the instrument.

- Always connect the instrument to the specified power supply voltage. Improper connection may cause a fire or electric shock.

KONICA MINOLTA OPTICS, INC.
Konica Minolta Sensing Americas, Inc.
Konica Minolta Sensing Europe B.V.

Osaka, Japan
 New Jersey, U.S.A.
 European Headquarter /BENELUX
 German Office
 French Office
 UK Office
 Italian Office
 Swiss Office
 Nordic Office
 Polish Office
 SE Sales Division
 Beijing Office
 Guangzhou Office
 Chongqing Office
 Qingdao Office
 Wuhan Office

Phone : 888-473-2656 (in USA), 201-236-4300 (outside USA)
 Nieuwegein, Netherlands
 München, Germany
 Roissy CDG, France
 Warrington, United Kingdom
 Cinisello Balsamo, Italy
 Dietikon, Switzerland
 Västra Frölunda, Sweden
 Wrocław, Poland
 Shanghai, China
 Beijing, China
 Guangdong, China
 Chongqing, China
 Shandong, China
 Hubei, China
 Singapore
 Seoul, Korea
 Bangkok, Thailand

Phone : +31(0)30 248-1193
Phone : +49(0)89 4357 156 0
Phone : +33(0)1 80 11 10 70
Phone : +44(0)1925 467300
Phone : +39 02649488.00
Phone : +41(0)43 322-9800
Phone : +46(0)31 7099464
Phone : +48(0)71 33050-01
Phone : +86-(0)21-5489 0202
Phone : +86-(0)10-8522 1551
Phone : +86-(0)20-3826 4220
Phone : +86-(0)23-6773 4988
Phone : +86-(0)532-8079 1871
Phone : +86-(0)27-8544 9942
Phone : +65 6563-5533
Phone : +82(0)2-523-9726
Phone : +66-2361-3730
Fax : 201-785-2482
Fax : +31(0)30 248-1280
Fax : +49(0)89 4357 156 99
Fax : +33(0)1 80 11 10 82
Fax : +44(0)1925 711143
Fax : +39 02849488.30
Fax : +41(0)43 322-9809
Fax : +46(0)31 474945
Fax : +48(0)71 734 52 10
Fax : +86-(0)21-5489 0005
Fax : +86-(0)10-8522 1241
Fax : +86-(0)20-3826 4223
Fax : +86-(0)23-6773 4799
Fax : +86-(0)532-8079 1873
Fax : +86-(0)27-8544 9991
Fax : +65 6560-9721
Fax : +82(0)2-523-9729
Fax : +66-2361-3771

Konica Minolta (CHINA) Investment Ltd.
 SE Sales Division
 Beijing Office
 Guangzhou Office
 Chongqing Office
 Qingdao Office
 Wuhan Office

Konica Minolta Sensing Singapore Pte Ltd.
Konica Minolta Optics, Inc. Korea
Konica Minolta Optics, Inc.

Addresses and telephone/fax numbers are subject to change without notice. For the latest contact information, please refer to the KONICA MINOLTA OPTICS Worldwide Offices web page :

<http://konicaminolta.com/instruments/network>